

Instructions

Cut down the blue line and separate the 2mm section from the print only section

Apply glue to the back of the 2mm section & secure onto some 2mm grey card

Allow the glue to dry before starting to cut out the sections

Once dry cut out the front & remove the door opening, this section also contains some optional pieces for air condition units

Now remove the rear sub base section


Place the front section printed side down & apply an even coat of glue

Now flip over the rear sub base section so this is now printed side down & then place centrally over the front section


Make sure both sections are square & central, then secure together either with bull dog clips, or just by applying pressure to both sections

Once dry cut out the side cover strips & secure over the edges

Now secure the top cover strip

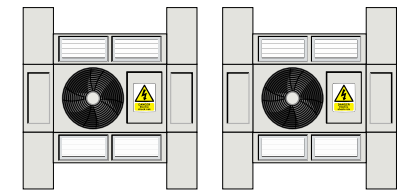

Air Conditioning Covering

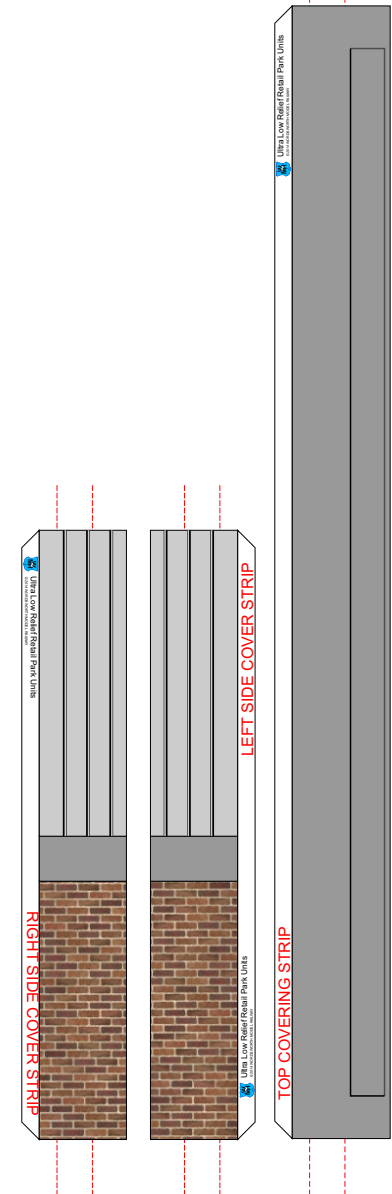


PRINT ONLY



Ultra Low Relief Retail Park Units

© 2014 WORDSWORTH MODEL RAILWAY

If using the optional air conditioning units glue the two sub base pieces back to back then using the coverings wrap these round both sub base units. You can either make one or two units with the items supplied

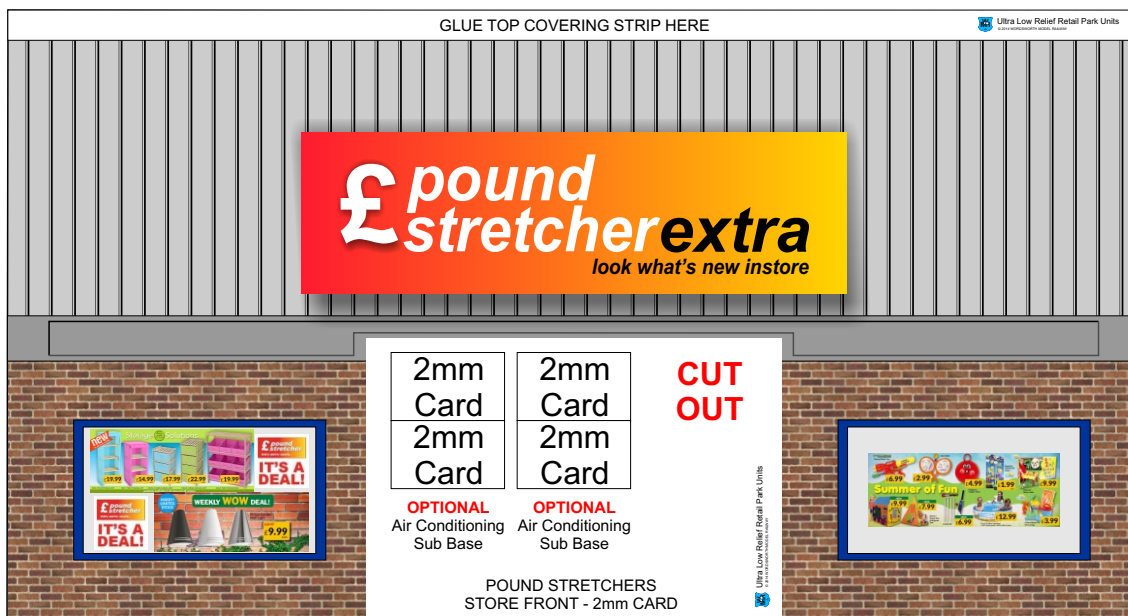

Instructions

Cut down the blue line and separate the 2mm section from the print only section

Apply glue to the back of the 2mm section & secure onto some 2mm grey card

Allow the glue to dry before starting to cut out the sections

Once dry cut out the front & remove the door opening, this section also contains some optional pieces for air condition units

Now remove the rear sub base section


Place the front section printed side down & apply an even coat of glue

Now flip over the rear sub base section so this is now printed side down & then place centrally over the front section


Make sure both sections are square & central, then secure together either with bull dog clips, or just by applying pressure to both sections

Once dry cut out the side cover strips & secure over the edges

Now secure the top cover strip

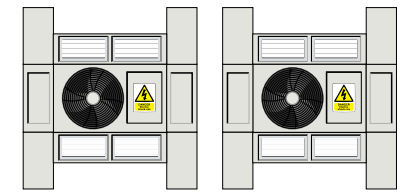

Air Conditioning
Covering

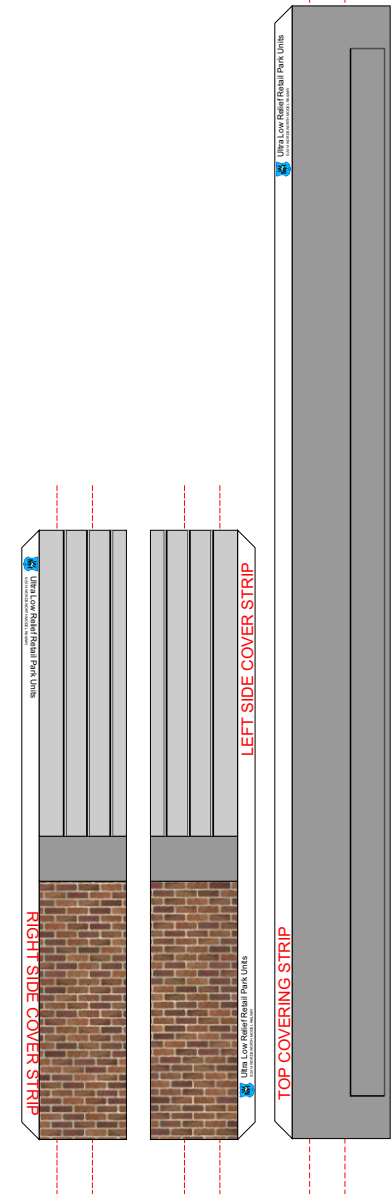



PRINT ONLY



Ultra Low Relief Retail Park Units

© 2014 WORDSWORTH MODEL RAILWAY

If using the optional air conditioning units glue the two sub base pieces back to back then using the coverings wrap these round both sub base units. You can either make one or two units with the items supplied

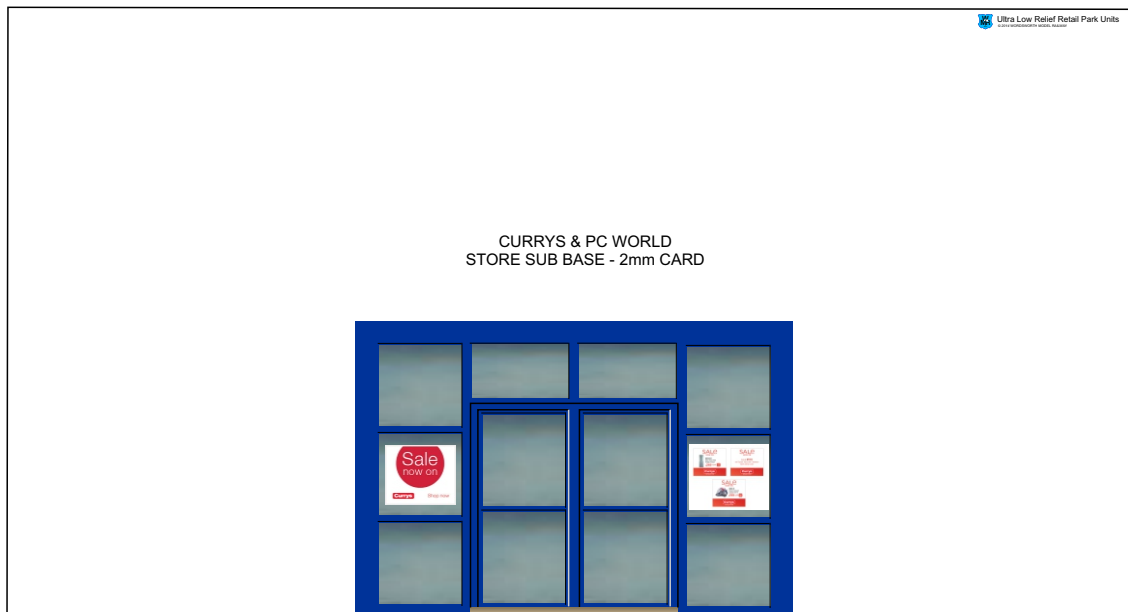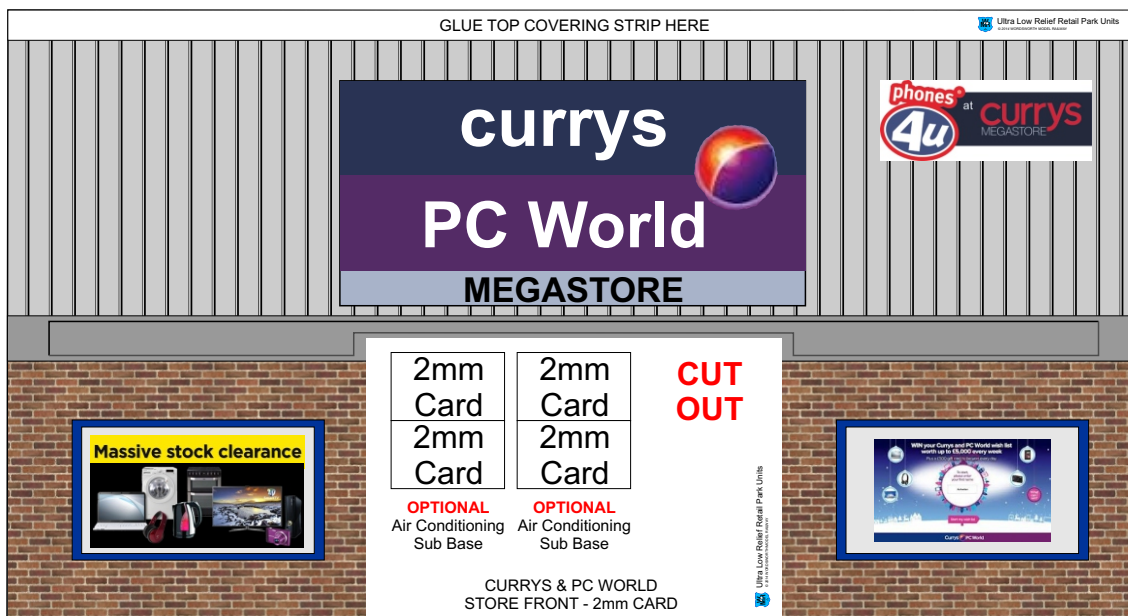

Instructions

Cut down the blue line and separate the 2mm section from the print only section

Apply glue to the back of the 2mm section & secure onto some 2mm grey card

Allow the glue to dry before starting to cut out the sections

Once dry cut out the front & remove the door opening, this section also contains some optional pieces for air condition units

Now remove the rear sub base section


Place the front section printed side down & apply an even coat of glue

Now flip over the rear sub base section so this is now printed side down & then place centrally over the front section


Make sure both sections are square & central, then secure together either with bull dog clips, or just by applying pressure to both sections

Once dry cut out the side cover strips & secure over the edges

Now secure the top cover strip

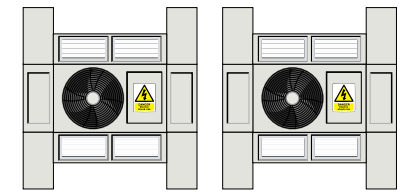

Air Conditioning Covering

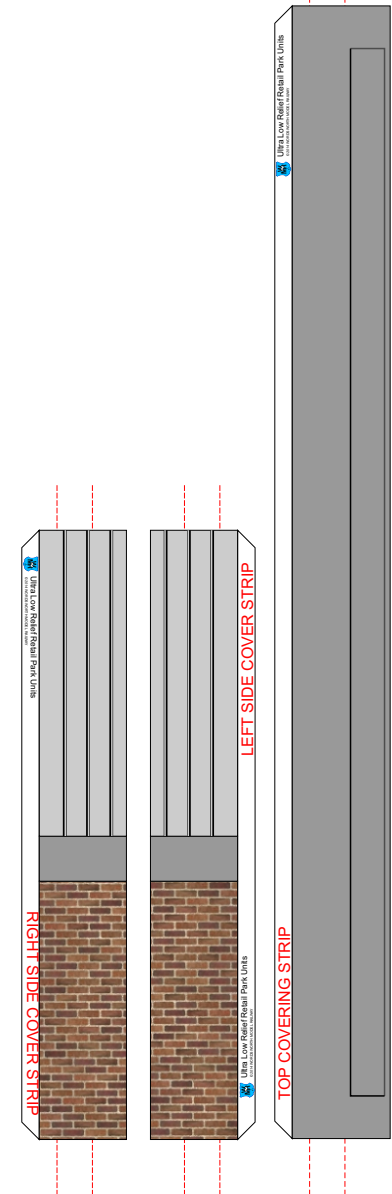

PRINT ONLY



Ultra Low Relief Retail Park Units

© 2014 WORDSWORTH MODEL RAILWAY

If using the optional air conditioning units glue the two sub base pieces back to back then using the coverings wrap these round both sub base units. You can either make one or two units with the items supplied



Instructions

Cut down the blue line and separate the 2mm section from the print only section

Apply glue to the back of the 2mm section & secure onto some 2mm grey card

Allow the glue to dry before starting to cut out the sections

Once dry cut out the front & remove the door opening, this section also contains some optional pieces for air condition units

Now remove the rear sub base section


Place the front section printed side down & apply an even coat of glue

Now flip over the rear sub base section so this is now printed side down & then place centrally over the front section


Make sure both sections are square & central, then secure together either with bull dog clips, or just by applying pressure to both sections

Once dry cut out the side cover strips & secure over the edges

Now secure the top cover strip

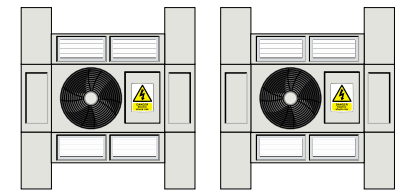

Air Conditioning
Covering

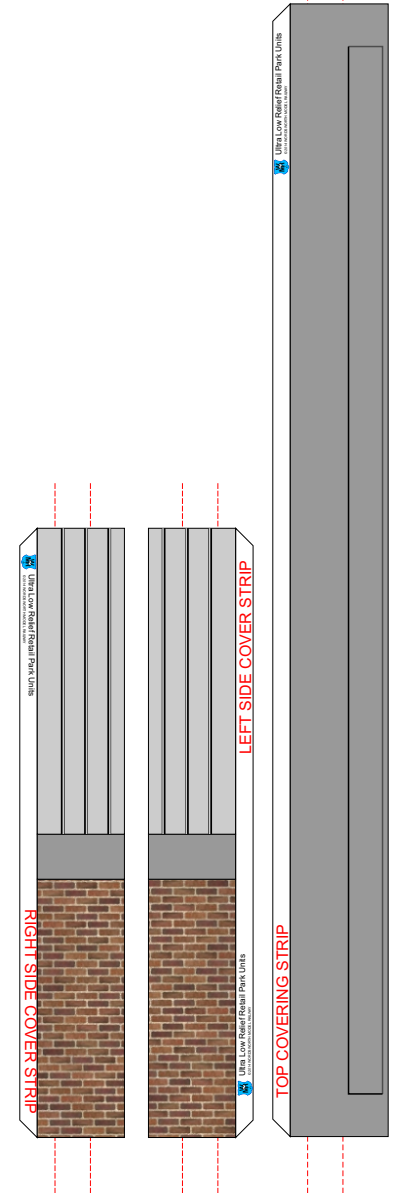

If using the optional air conditioning units glue the two sub base pieces back to back then using the coverings wrap these round both sub base units. You can either make one or two units with the items supplied



Ultra Low Relief Retail Park Units

© 2014 WORDSWORTH MODEL RAILWAY



Instructions

Cut down the blue line and separate the 2mm section from the print only section

Apply glue to the back of the 2mm section & secure onto some 2mm grey card

Allow the glue to dry before starting to cut out the sections

Once dry cut out the front & remove the door opening, this section also contains some optional pieces for air condition units

Now remove the rear sub base section


Place the front section printed side down & apply an even coat of glue

Now flip over the rear sub base section so this is now printed side down & then place centrally over the front section


Make sure both sections are square & central, then secure together either with bull dog clips, or just by applying pressure to both sections

Once dry cut out the side cover strips & secure over the edges

Now secure the top cover strip

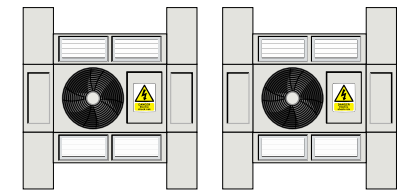

Air Conditioning Covering


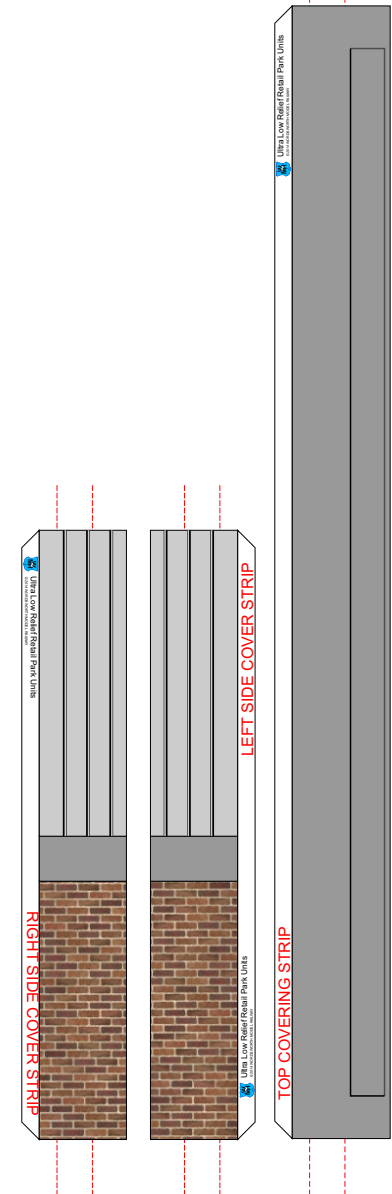


If using the optional air conditioning units glue the two sub base pieces back to back then using the coverings wrap these round both sub base units. You can either make one or two units with the items supplied



Ultra Low Relief Retail Park Units

© 2014 WORDSWORTH MODEL RAILWAY

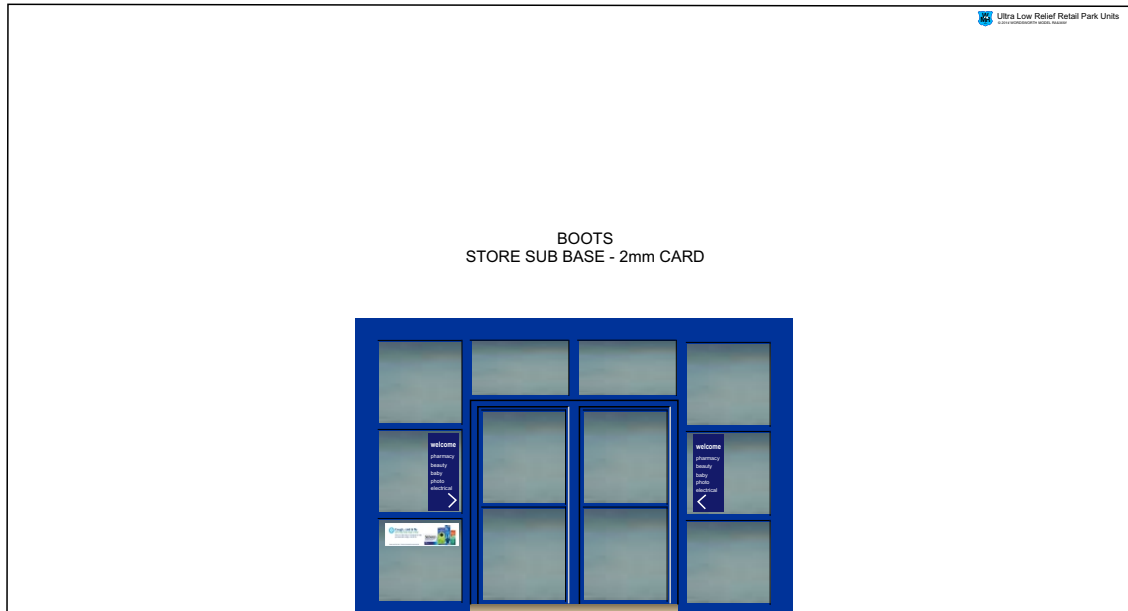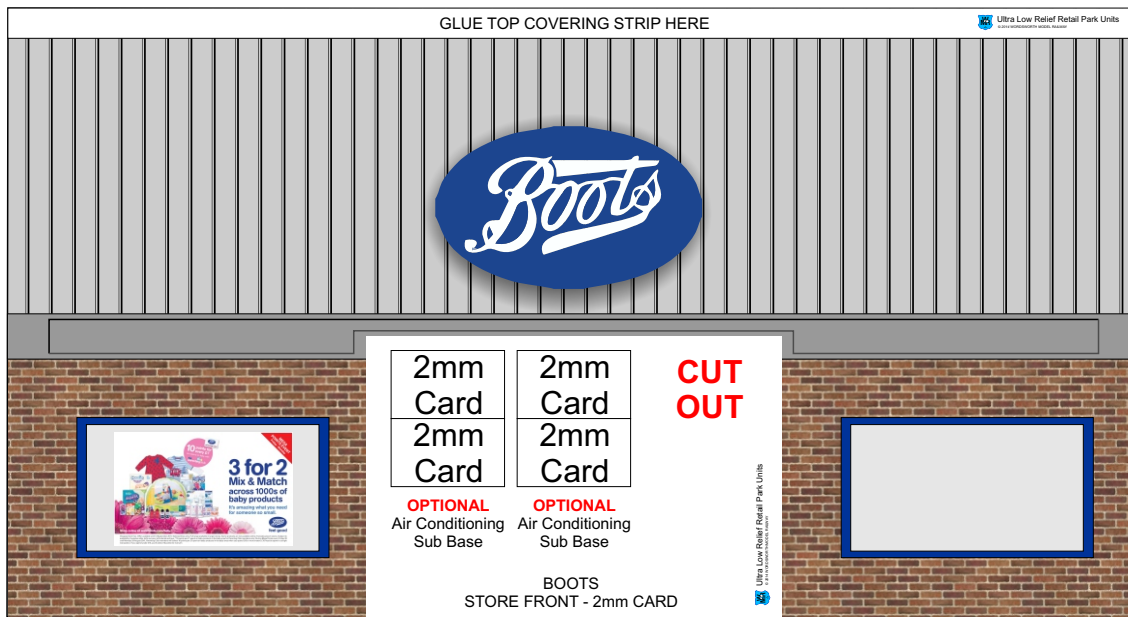

Instructions

Cut down the blue line and separate the 2mm section from the print only section

Apply glue to the back of the 2mm section & secure onto some 2mm grey card

Allow the glue to dry before starting to cut out the sections

Once dry cut out the front & remove the door opening, this section also contains some optional pieces for air condition units

Now remove the rear sub base section


Place the front section printed side down & apply an even coat of glue

Now flip over the rear sub base section so this is now printed side down & then place centrally over the front section


Make sure both sections are square & central, then secure together either with bull dog clips, or just by applying pressure to both sections

Once dry cut out the side cover strips & secure over the edges

Now secure the top cover strip

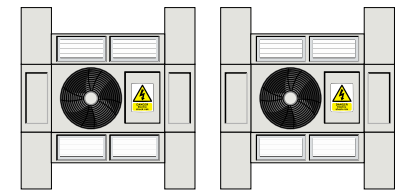

Air Conditioning Covering

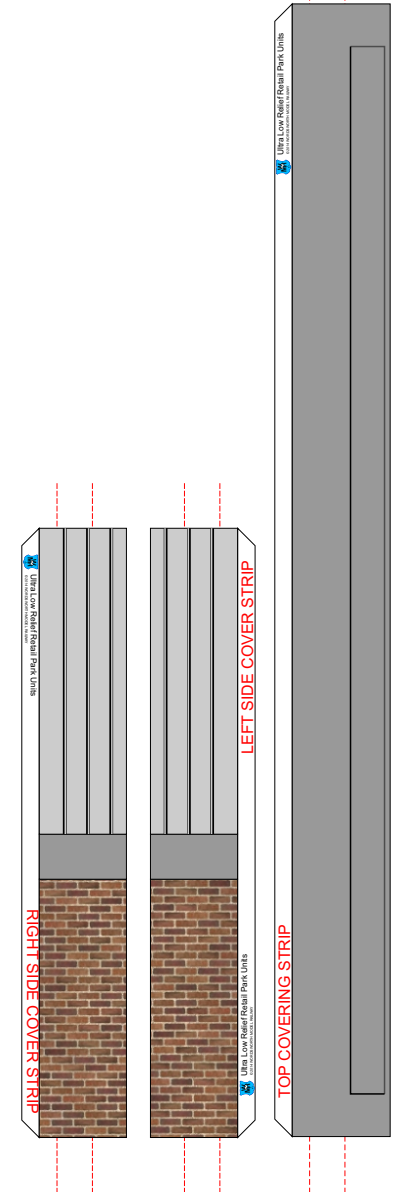

If using the optional air conditioning units glue the two sub base pieces back to back then using the coverings wrap these round both sub base units. You can either make one or two units with the items supplied



Ultra Low Relief Retail Park Units

© 2014 WORDSWORTH MODEL RAILWAY